


Installation Manual (WET 6)

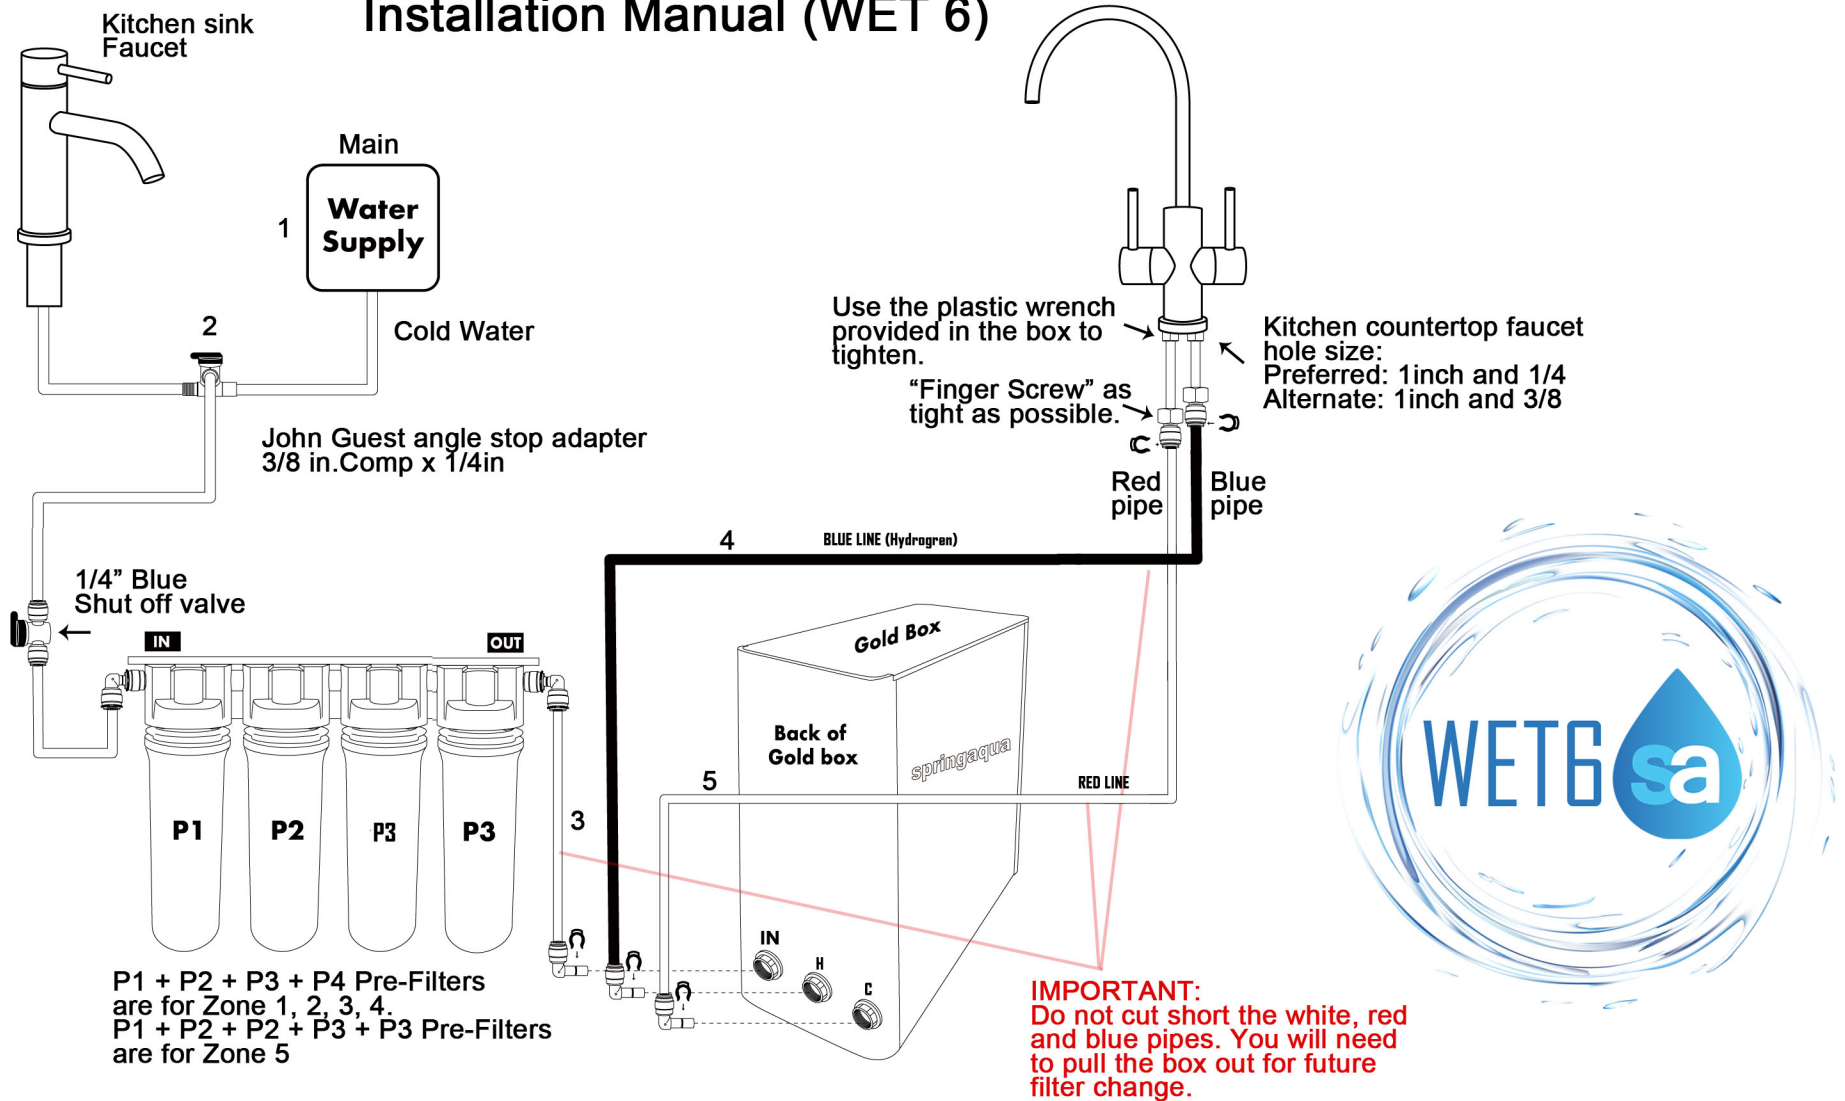

1. Shut off cold water supply under the sink.
2. Angle stop adapter splits cold water line out connecting white tube to 1/4 inch blue shut off valve on pre-filters.
3. White tube exits the 2nd P3 and connects to gold box "IN".
4. Gold box "H" (blue) connects to faucet right.
5. Gold box "C" (red) connects to faucet left.
6. Turn on water supply and flush filter for 10 minutes for each side.
7. Check to make sure there are no leaks.