



WET 7 Filter Change Manual





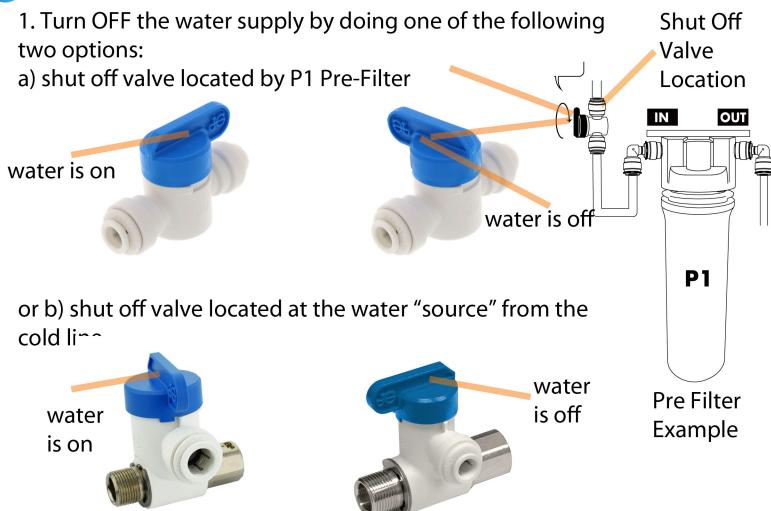


- 2. Run the Spring Aqua faucet until no more water is coming out, this is a good way to check that the water is actually turned off.
- 3. Slide the Gold and Red Box out gently from under the sink.
- 4. Remove the Lid and pull the side panels off for both the Gold and Red box.

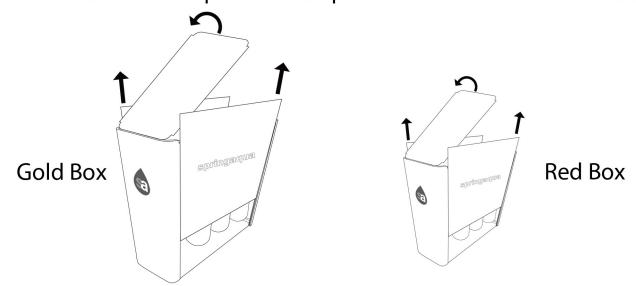



- 5. If there is any foam padding between and under the filters, pull them out and throw them away. These will no longer be needed.
- 6. Locate the safety switch at the bottom plate of the Gold and Red box and flip it up to shut off all the water supply. Take out the cotton puck and place it in a dry area.

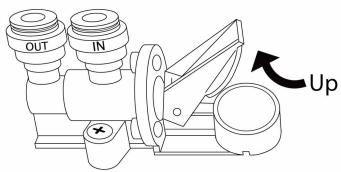

7. You will also need a TOWEL to change out the filters in the Gold and Red box.

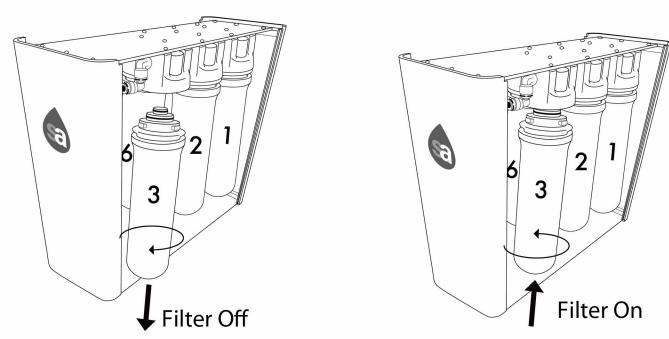


Image is showing an example on how to twist the filters off and put them back in.

Gold Box: Numbers are labeled **blue**Red Box: Numbers are labeled in **green**




8. Reset the flow meter back to 1600 gallons.


1600

down arrow

turn clockwise until the down arrow points to 1600 gallons

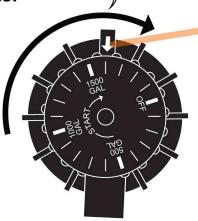


9a. Dry the area thoroughly for both the Gold and Red Box. Put the cotton puck back into the circular hole. If the cotton puck is wet, it will expand and will not it the hole. You will need to replace it with a new cotton puck.

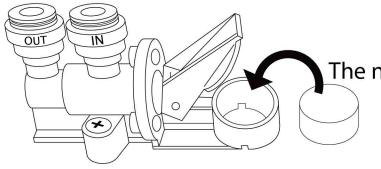

The new cotton puck

9b. Flip the safety switch back to allow water flow when your filter change is complete.

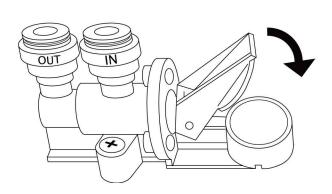


10. Take a screwdriver and tighten the screws of the image below located in the gold box. Screws may get loose over time.






11. Slide the side panels back and put the lid back on both the Gold and Red

Box.

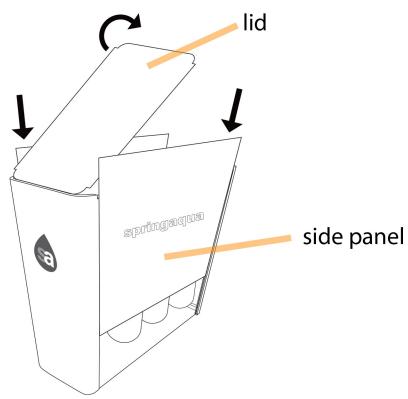

12. Change your pre-filters.

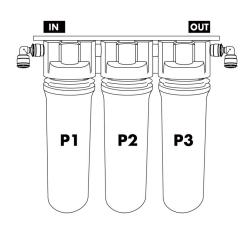

Pre Filter Example

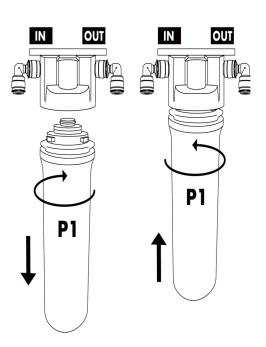


image is showing an example on how to twist the filters off and put them back in,



13. Place the Gold box, Red box, and pre-filters back under the sink.

14. To allow water flow again, turn the **blue shut off valve** "ON" that is located either at the pre-filters or the main water supply under the kitchen sink. (Go back to #1 to see the details)

15. Flush the water on the left and right side for 15mins each before usage, and you might have to balance the flush by alternating each side to create even flow on both sides until the water system calibrates.

16. Check to make sure that there are no leaks.





For futher questions: text 206-880-7676

email: bill@springaqua.com, or

schedule a time on our calendar: www.springaqua.com/contact-us